




The tools you will need. The bit size of screw B is T20 and C is T15.



**Start with putting these parts together.
The single screw to the left is to be used
here.**

Remember the right angle, 79 degrees.

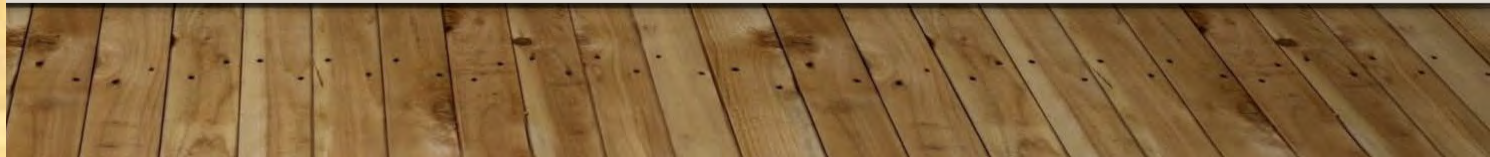

Next step is to put these parts together, use screw A x2 in the two bigger holes.






When adding the sitting plate you use screw B.




Use screw B x3.



Use screw B x2 when adding this part.

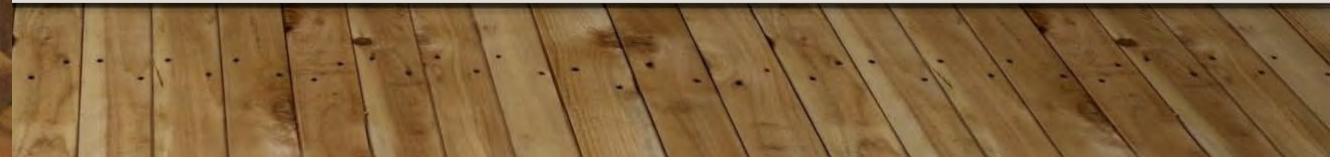


**When adding the sitting pad use screw
C x4.**

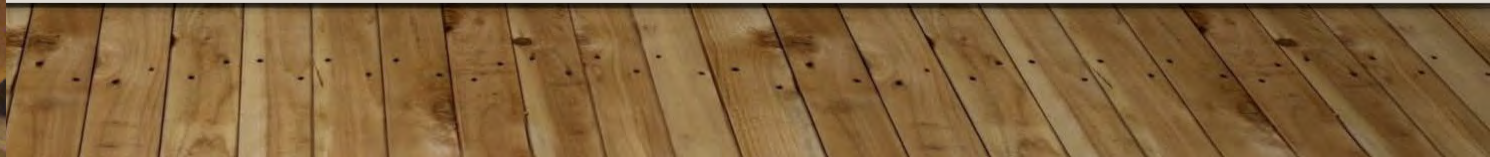



**This is the second last part to add.
Use screw B x3. One to the right,
middle and one on the left.**

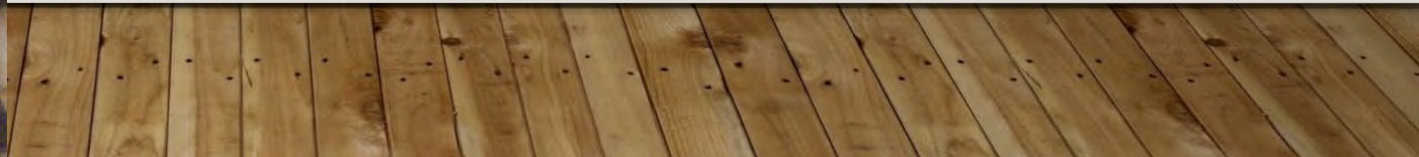



The last part is the pad for your hands. Use screw C x2 from underneath.



The final result, hope everything goes well with putting your Linne's study chair together!

